

The concept of the public way L charged suction installation instructions

Install and install the product Please read this installation manual carefully
Please keep this manual properly

Installation Precautions

Before installing the tailgate, check the status of the original tailgate (the door gap is stable)

Check the appearance of the vehicle before installation to take pictures of the scratches and inform the owner

After the product is installed, it is necessary to perform tailgate learning to work properly.

All the pictures in this manual are for reference only. Pictures and objects may differ, but the installation method is the same.

In order to facilitate your installation, please read the instruction manual of the product carefully before installation; care should be taken to protect the surface of your car and prevent scratches during installation.

Please check regularly that all accessories connected with the car are loose to ensure safe use.



1. In the original car ball head installed our poles (or steps)



2. Remove the original car right bracket, installation we lower bracket



3. Remove the original car bottom bracket, installation we lower left bracket



4. Hall line through from the hole



5. Strut installation is complete



5. Remove the trim at the bottom of the main driving, find out the power



6. Remove the original car 30 a fuse plug, plug in our power plug



8. Connected to ground



9. In the main drive side before remove the plaque stiletto installation dedicated switch




10. In the main drive belt B column trim place apart, find the control




11. Our yellow lines to central pick blue and brown



12. In the trunk of the left to find the headlights remove the lights, the original light red, brown line cut, one end of the control box out of the two yellow, and blue lines (pictured), the other end of the package with tape

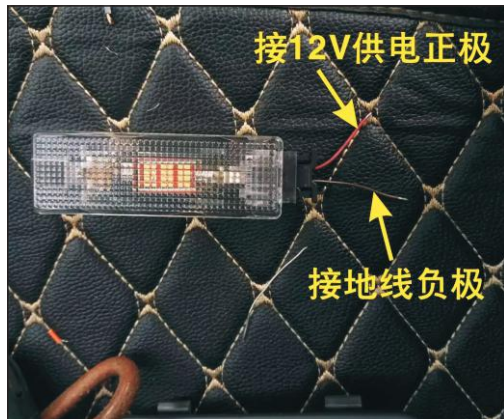

13. In our central control box left out two lines of the anode after the lights (in the trunk) anode, cathode

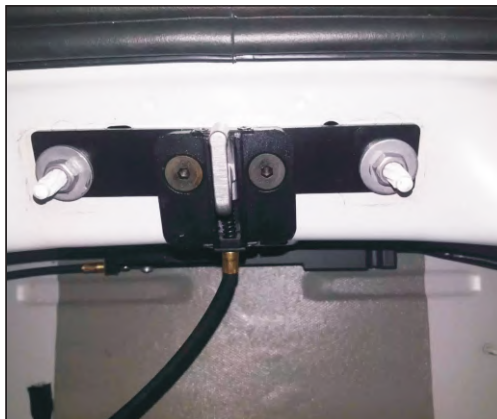

14. Remove the original lock buckle, install our electric lock



15. Motor installation position



16. Unplug the seat in the car door lock, the seat of our tee adaptor



17. Back in the car door for the saddle, the main switch before driving out two lines, respectively by the seat of the two lines



18. The hole line, power line, electric line plug according to the color of a pair of control box



19. Installed as shown, the central control box, with our company 3 m glue and cable tie



20. In the tail door trim stiletto installation we switch button